

Saturn X Pairing Procedure Addendum

There is a new pairing procedure for binding the receiver to the transmitter. Your transmitter and receiver are factory bound, but should you purchase a second receiver, you will need to pair it to your transmitter.

1. Turn on the Transmitter (both red & green lights should illuminate).
2. Press 'setup' on front of receiver and then power up the receiver (the red light on the receiver should be flashing).
3. While the light on receiver is still flashing, press the 'PDM' button on Transmitter. The green light should be flashing.
4. After a short period, the green light on the Transmitter will illuminate to solid green and the flashing light on the receiver will illuminate to solid red.
5. Release the 'PDM' button, the binding process is complete. To store the pairing memory between the transmitter and receiver, simply turn off the transmitter, then turn on again.